


- LEGENDA/LABELL:
1. TERMINAL BLOCK MICRA 100
 2. RELE' DI GUASTO (APERTO=GUASTO)/FAULT RELAY (OPEN=FAULT)
 3. RELE' DI ALLARME (CHIUSO=ALLARME)/ALARM RELAY (CLOSED=ALARM)
 4. APIC (NDN UTILIZZATO) / NOT USED
 5. RS485 CONNESSIONE ALLA RETE SenseNET/ RS485 TD SENSENET
 6. CONNESSIONE ALIMENTAZIONE ESTERNA/ EXTERNAL 24Vdc
 7. EM312SR MODULO IN 1OUT/ 1IN 1 OUT MODULE
 8. SPS24X60/X ALIMENTATORE ESTERNO/ EXTERNAL POWER SUPPLY

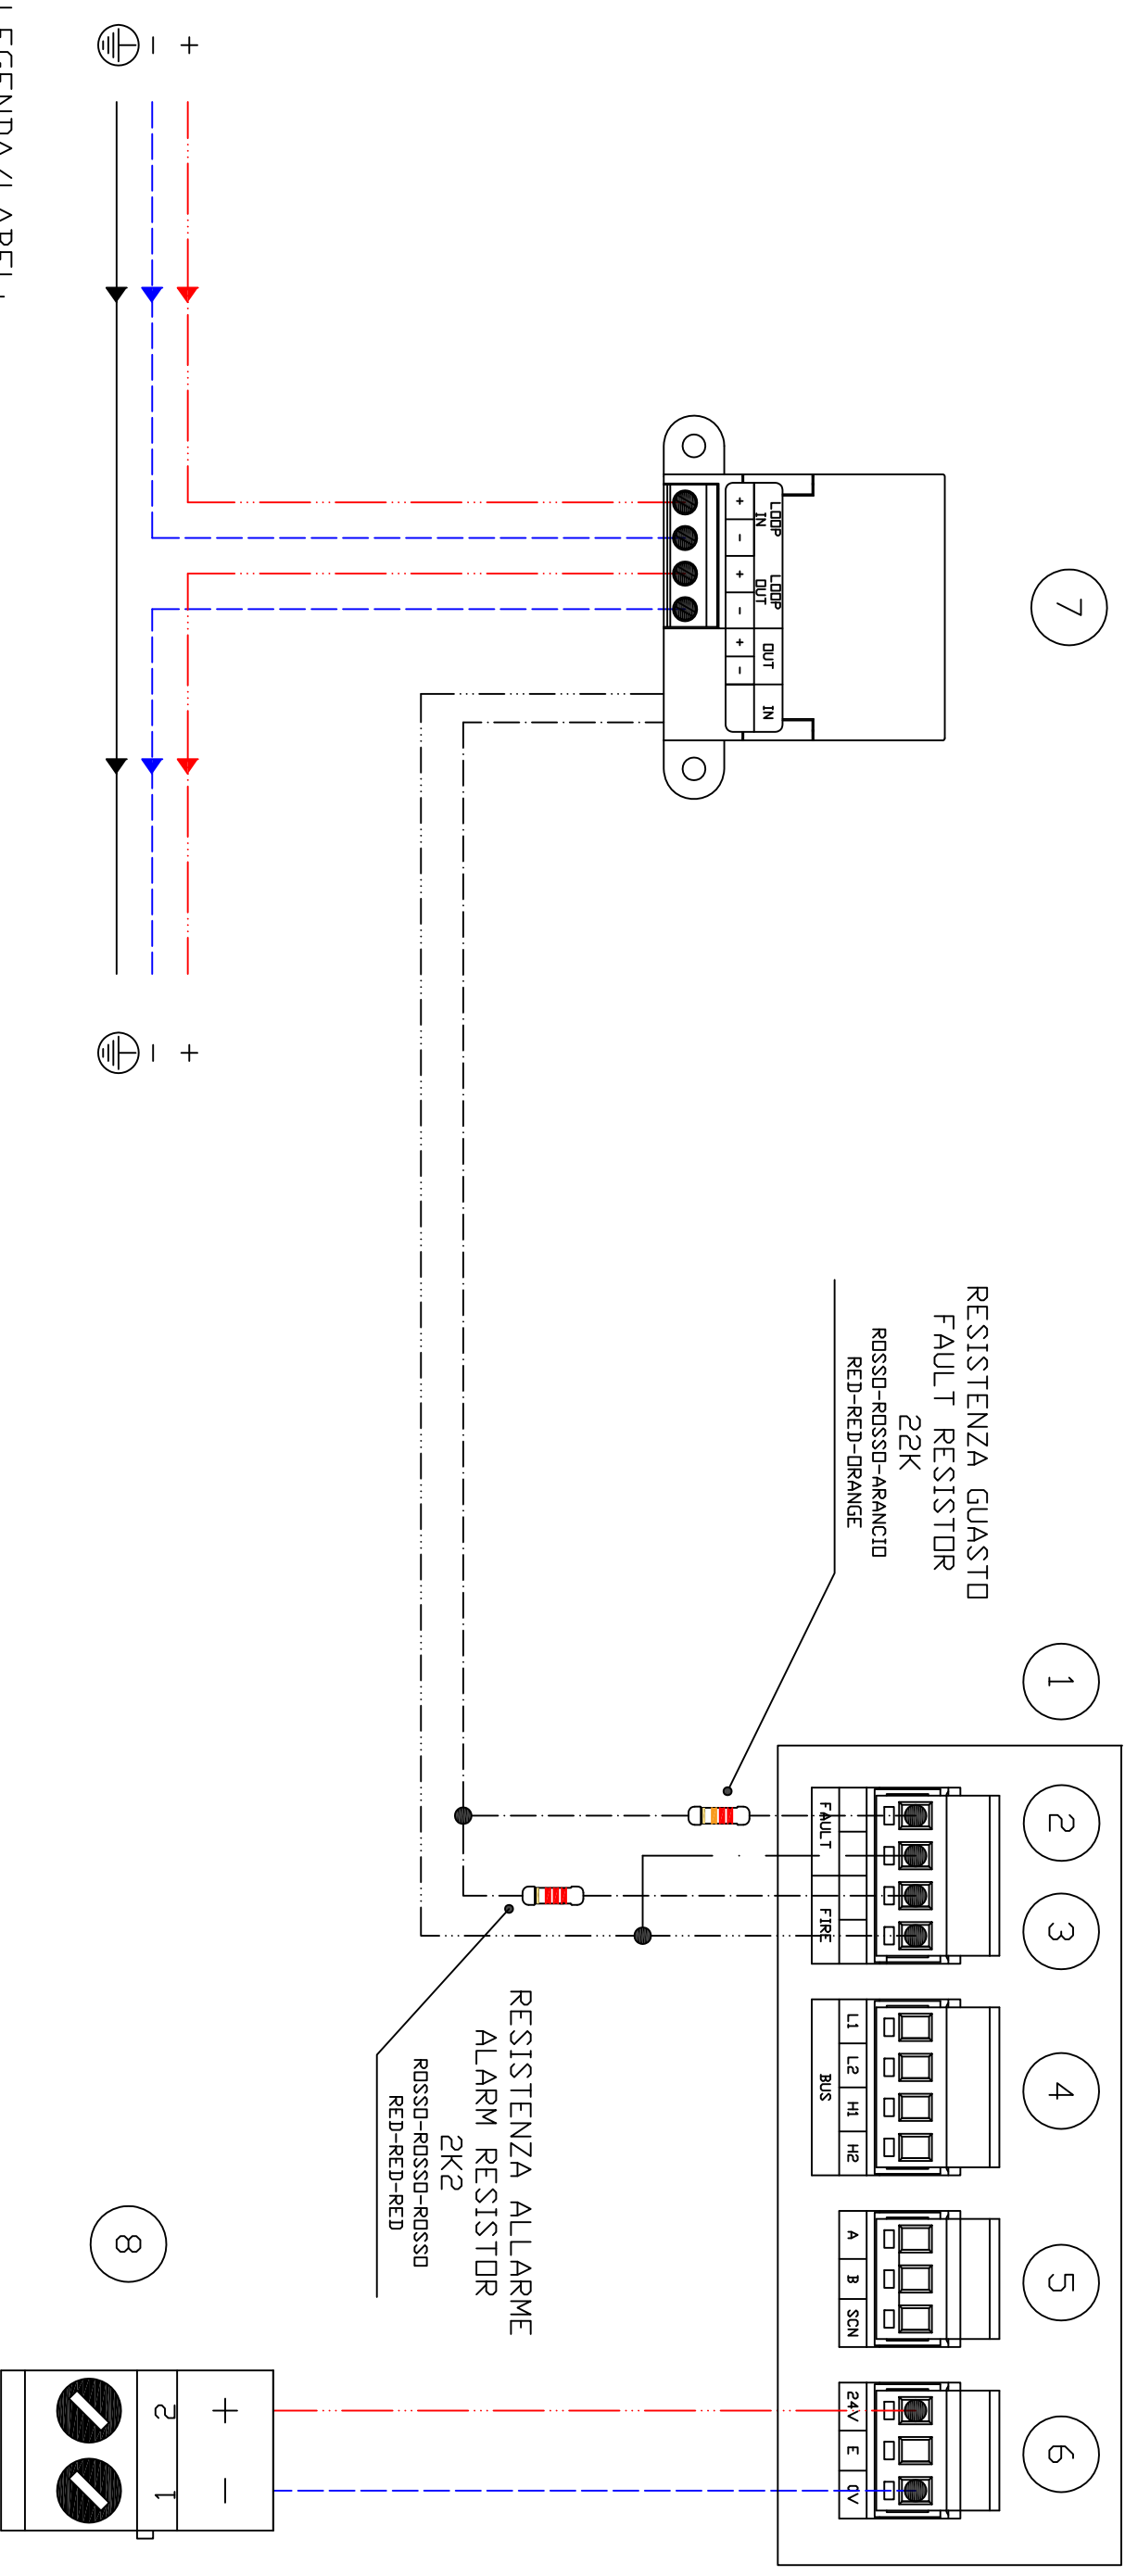

inim
ELECTRONICS
Http://www.inim.biz

EU311 TO MICRA 100 WIRING

Rev. 1.0 Date 01/06/2011

ITD021

